




BOULEVARD TREE WELL INSTALLATION SPECIFICATIONS

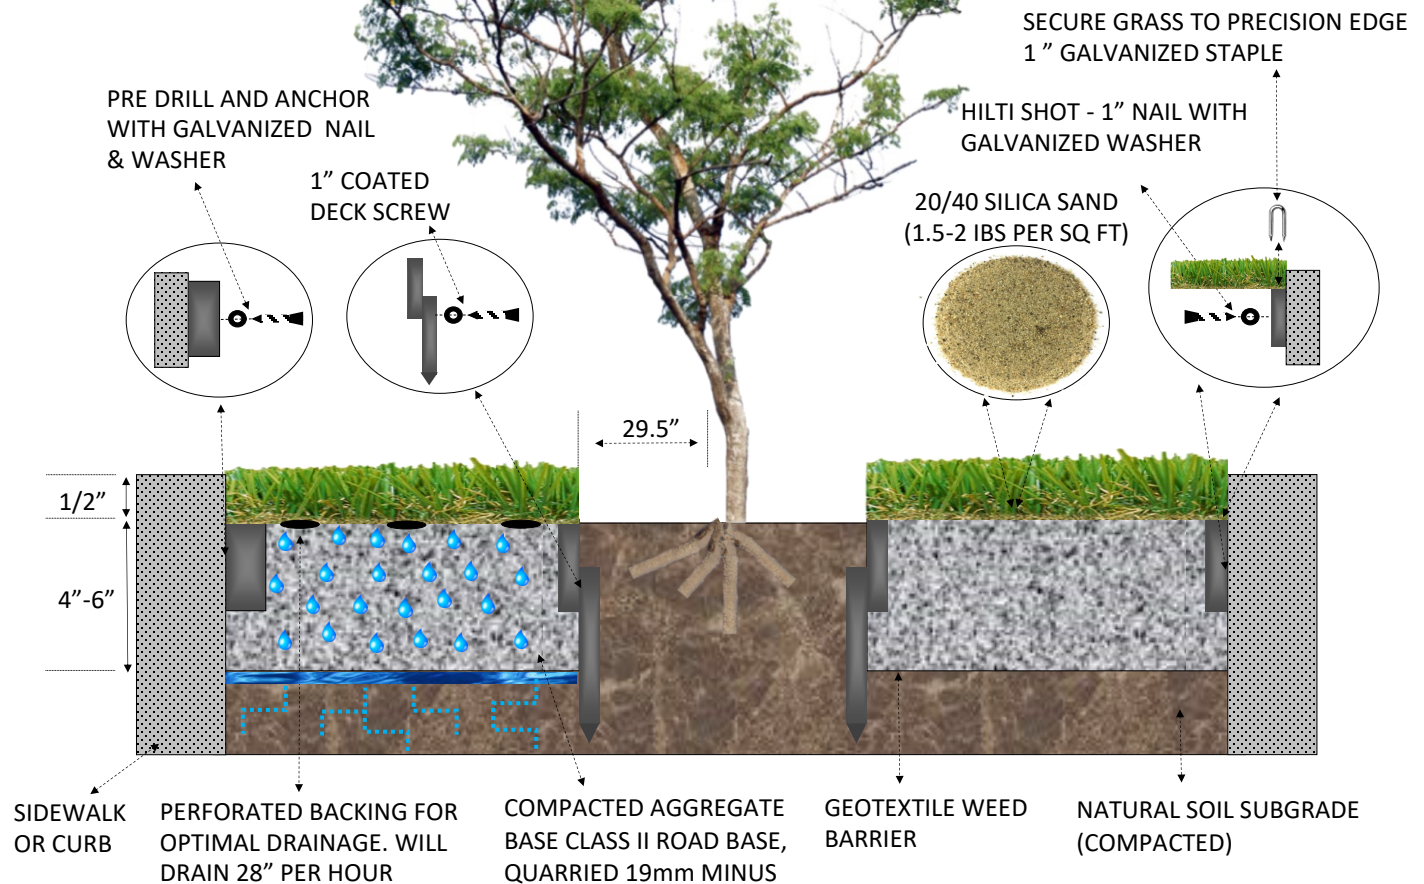

INSTALLATION STEPS:

1. INSTALL PRECISION EDGE NAILER BOARD ALONG THE INSIDE WALL CAVITIES. 2X4 PLASTIC FOR STRAIGHT RUNS AND 1X6 PLASTIC FOR CURVED RUNS.
2. BACKFILL WITH 2 SEPARATE 2" LIFTS OF CLASS II ROAD BASE, QUARRIED 19mm MINUS AND COMPACT TO 90%
3. INSTALL GRASS AS PER THE TURF DESIGN AND SEEMED WITH THE ADJACENT PIECES RUNNING IN THE SAME DIRECTION; SEEMS SHOULD BE GLUED WITH NORDOT ADHESIVE #34N2 AND SEEM CLOTH, NOT ADHESIVE TAPE
4. ONCE THE GRASS IS INSTALLED POWER BROOM ALL FIBERS BEFORE YOU INFILL. THIS WILL ENSURE THE INFILL REACHES THE BOTTOM OF THE GRASS
5. EVENLY SPREAD 2 SEPARATE LAYERS OF INFILL; FIRST LAYER 1.5 LBS PER SQ FT AND POWER BROOM; SECOND LAYER 1 LBS PER SQ FT AND FINAL POWER BROOM
6. ONCE GRASS IS INSTALLED TO SPEC, SEEMED, AND INFILLED, SOAK THE ENTIRE AREA WITH WATER MAKING SURE ALL INFILL HAS SETTLED INTO THE BASE OF THE GRASS



COMMERCIAL LANDSCAPE SYSTEM
BOULEVARDS, SIDEWALKS AND MEDIANS

