


PRECISION GREENS ROOF TOP INSTALLATION (DIMPLE BOARD)

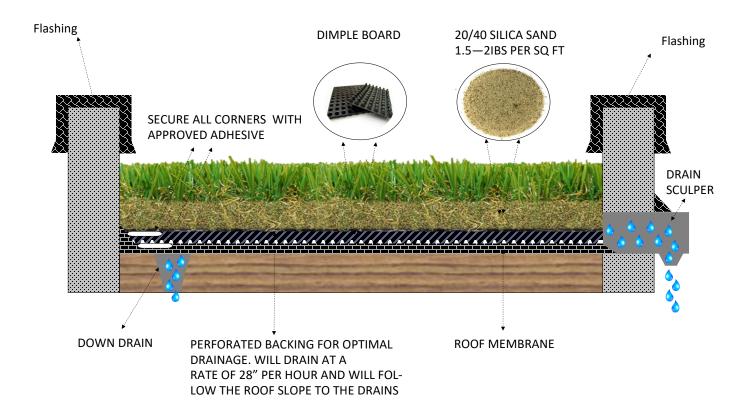

INSTALLATION STEPS:

- 1. CLEAR AREA OF ALL DEBRIS
- 2. DELIVER PRODUCT TO THE ROOF TOP
- 3. INSTALL 5' WIDE TURF CLOUD OVER THE ENTIRE AREA AND SEEM PICES WITH TUCK TAPE AND SECURE CORNERS WITH APPROVED ADHESIVE
- 4. INSTALL THE ARTIFICIAL GRASS, CUT TO SHAPE, AND SECURE CORNERS WITH APPROVED ADHESIVE
- 5. POWER BROOM GRASS TO ENSURE FIBERS ARE

NOTES:

- 1. REQUIRES MINIMUM OF THREE INSTALLERS
- 2. PLAN FOR CRANE AND TRAFFIC CONTROL SERVICES IF REQUIRED
- 3. ENSURE SUFFCIANT FALL PROTECTION FOR INSTALLERS

- EVENLY SPREAD 2 SEPARATE LAYERS OF INFILL; FIRST LAYER 1.5 IBS PER SQ FT AND POWER BROOM; SECOND LAYER1 IBS PER SQ FT AND FI-NAL POWER BROOM
- 4. ONCE GRASS IS INSTALLED TO SPEC, SEEMED, AND INFILLED, SOAK THE ENTIRE AREA WITH WATER MAKING SURE ALL INFILL HAS SETTLED INTO THE BASE OF THE GRASS
- 4. ONLY USE APPROVED ADHESIVE TO LAMINATE PRODUCTS
- 5. WATER WILL DRAIN WITH ROOF SLOPE



