




## PRECISION GREENS BOULEVARD INSTALLATION

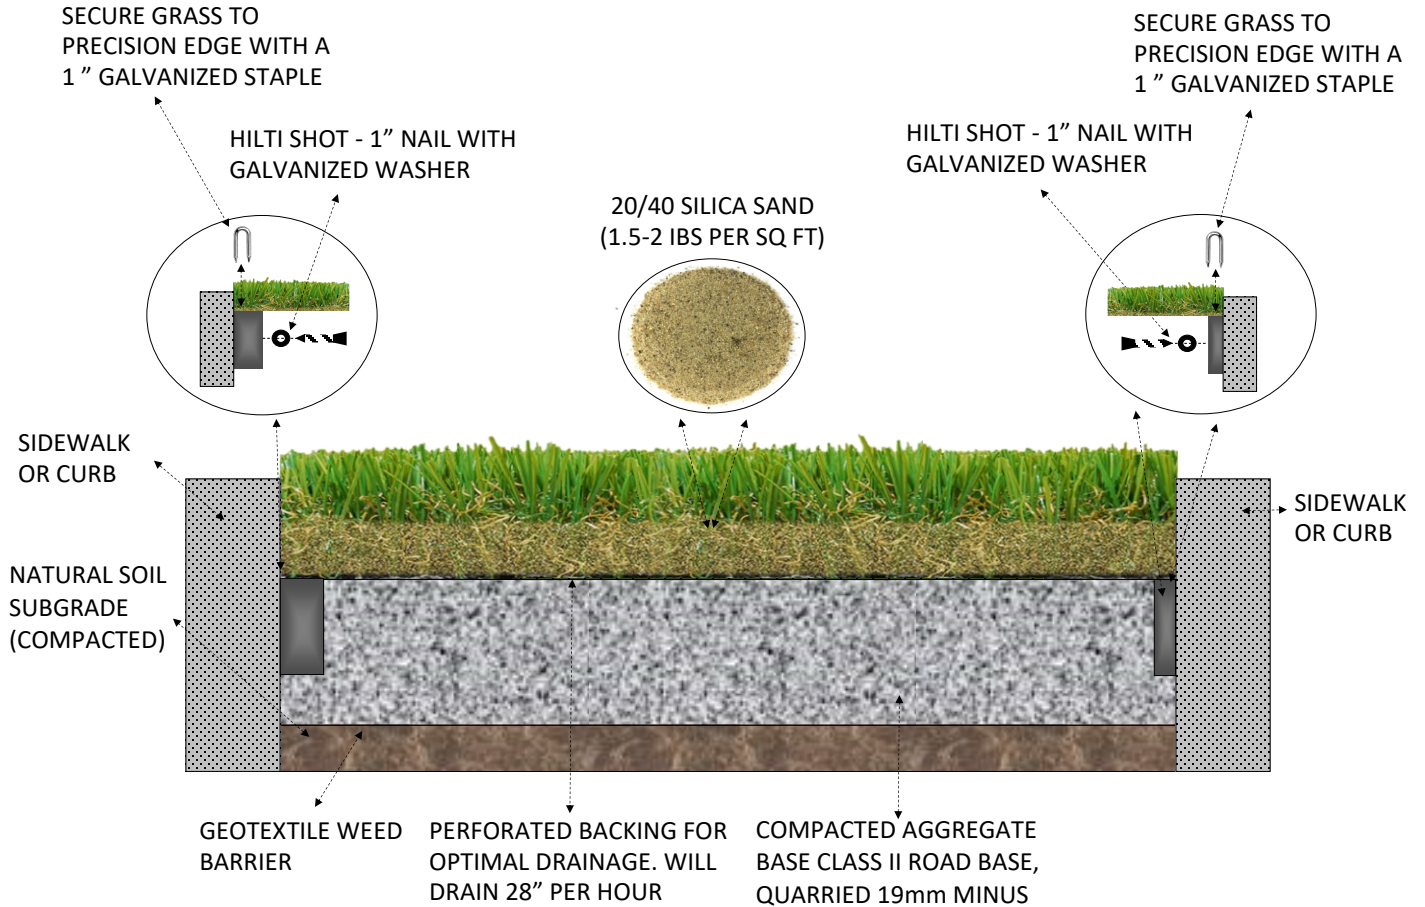

### **INSTALLATION STEPS:**

1. INSTALL PRECISION EDGE NAILER BOARD ALONG THE INSIDE WALL CAVITIES. 2X4 PLASTIC FOR STRAIGHT RUNS AND 1X6 PLASTIC FOR CURVED RUNS.
2. BACKFILL WITH 2 SEPARATE 2" LIFTS OF CLASS II ROAD BASE, QUARRIED 19mm MINUS AND COMPACT TO 90%
3. INSTALL GRASS AS PER THE TURF DESIGN AND SEEMED WITH THE ADJACENT PIECES RUNNING IN THE SAME DIRECTION; SEEMS SHOULD BE GLUED WITH NORDOT ADHESIVE #34N2 AND SEEM CLOTH, NOT ADHISIVE TAPE
4. ONCE THE GRASS IS INSTALLED POWER BROOM ALL FIBERS BEFORE YOU INFILL. THIS WILL ENSURE THE IN-FILL REACHES THE BOTTOM OF THE GRASS
5. EVENLY SPREAD 2 SEPARATE LAYERS OF INFILL; FIRST LAYER 1.5 IBS PER SQ FT AND POWER BROOM; SECOND LAYER 1 IBS PER SQ FT AND FINAL POWER BROOM
6. ONCE GRASS IS INSTALLED TO SPEC, SEEMED, AND INFILLED, SOAK THE ENTIRE AREA WITH WATER MAKING SURE ALL INFILL HAS SETTLED INTO THE BASE OF THE GRASS



**COMMERCIAL LANDSCAPE SYSTEM**  
BOULEVARDS, SIDEWALKS AND MEDIANS

